

1. Mark the position of hangings. Use the common hook with cca. 10mm eyelet diameter. The sufficient loading capacity of hanger makes 500N. It is not a part of delivery.

2. Hang the hangings on prepared fastening points. Adjust the length of hangings.

3. Bolt the C hanger.

4. Click in the profile.


5. Slide the connector. Tighten the locking screw.

6. Add next profile. Tighten the locking screw.


7. Add next profile.

8.


9. There has to be shoulder on connecting metal part. Put on the front end of diffuser over the shoulder.

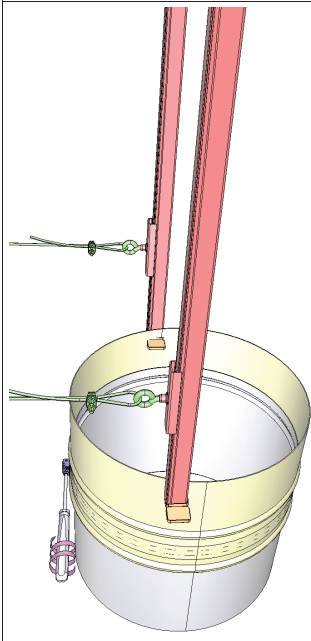


10. Clamp by connecting strip.

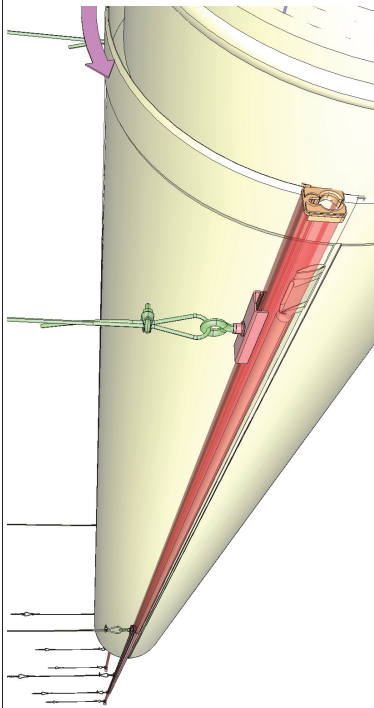


11. Hang up fabric diffuser. Join the individual parts of diffusers by sewed zips.

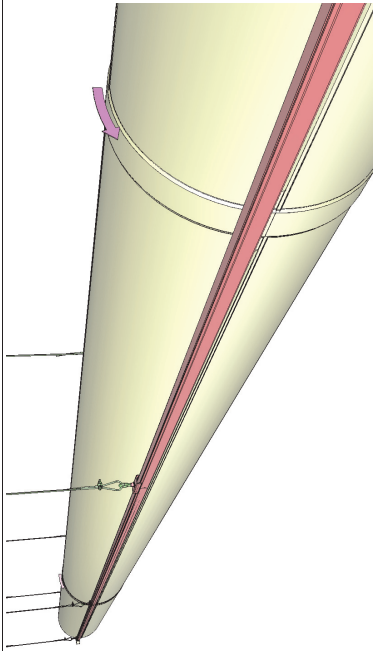


12. Hang up fabric diffuser. Join the individual parts of diffusers by sewed zips.

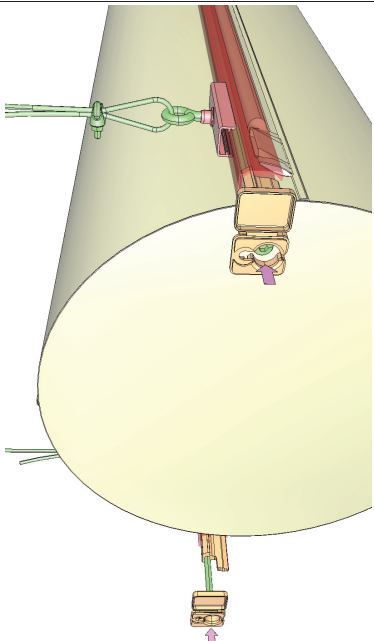


13. Mount the plugs on both ends of profiles.

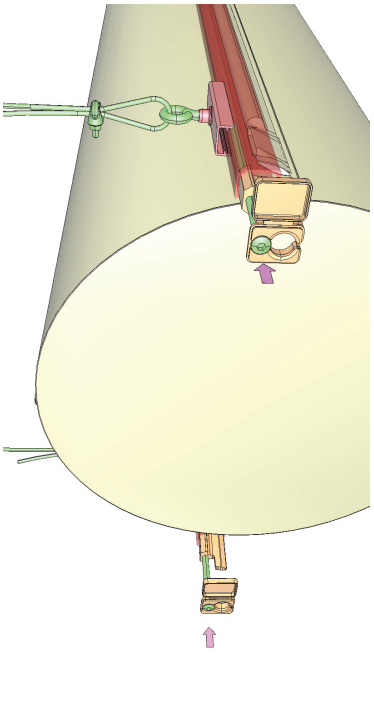

14. Mount the plugs on both ends of profiles.

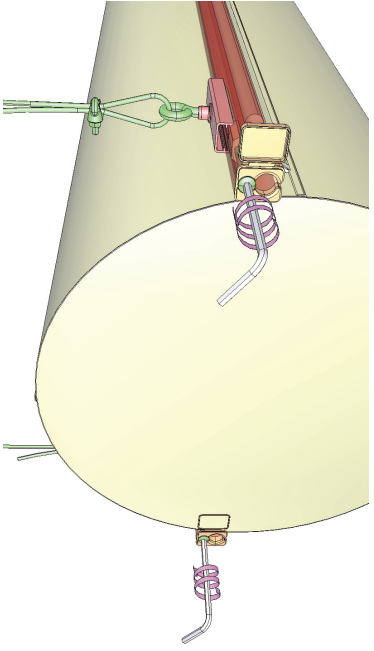

15. Mount the plugs on both ends of profiles.

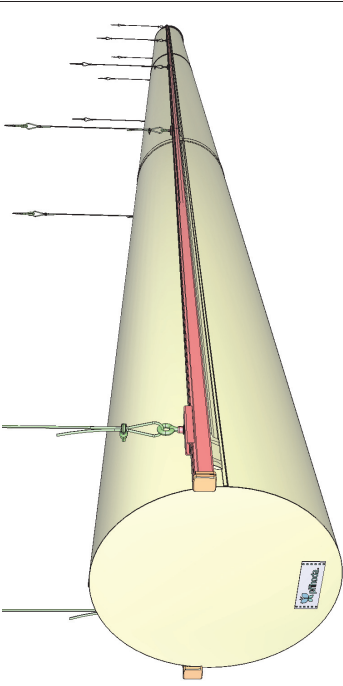


16.

3. INSTALLATION

6A **6AD** **6AF** **6AM**


SECTION **C**

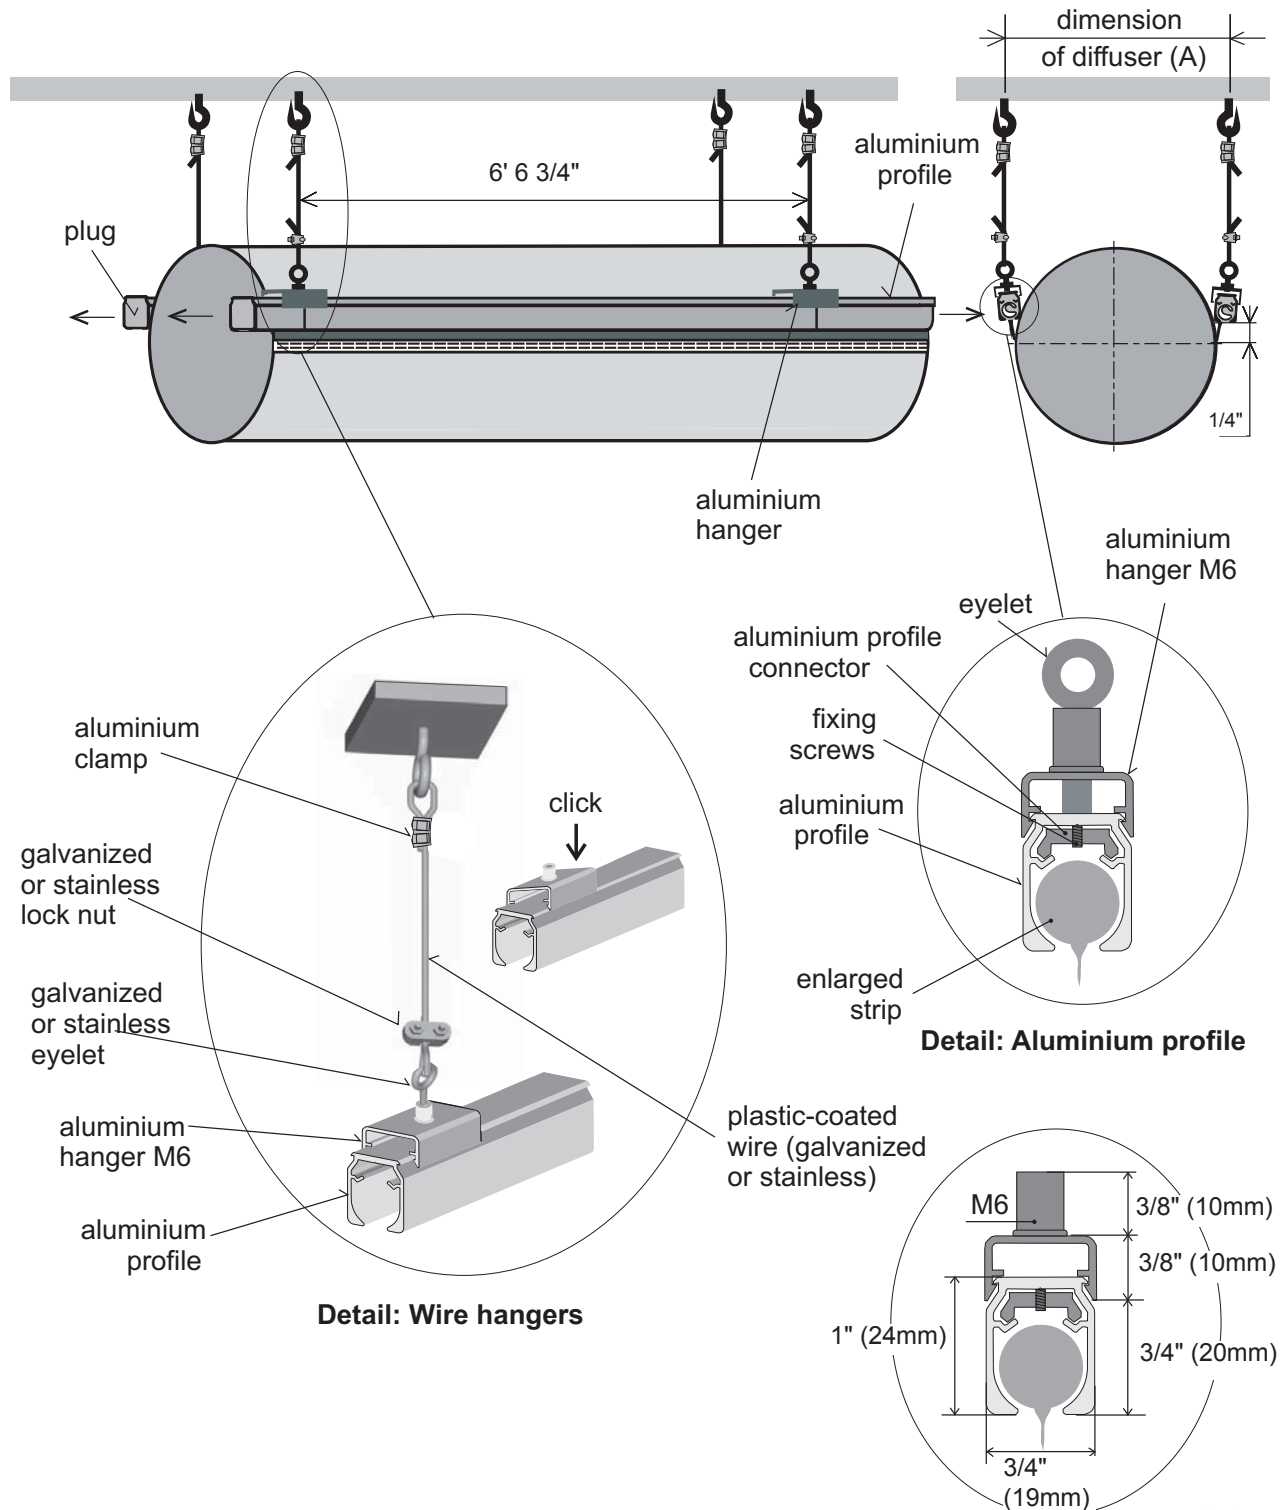

6A 6AD 6AF 6AM

3. INSTALLATION

SECTION C

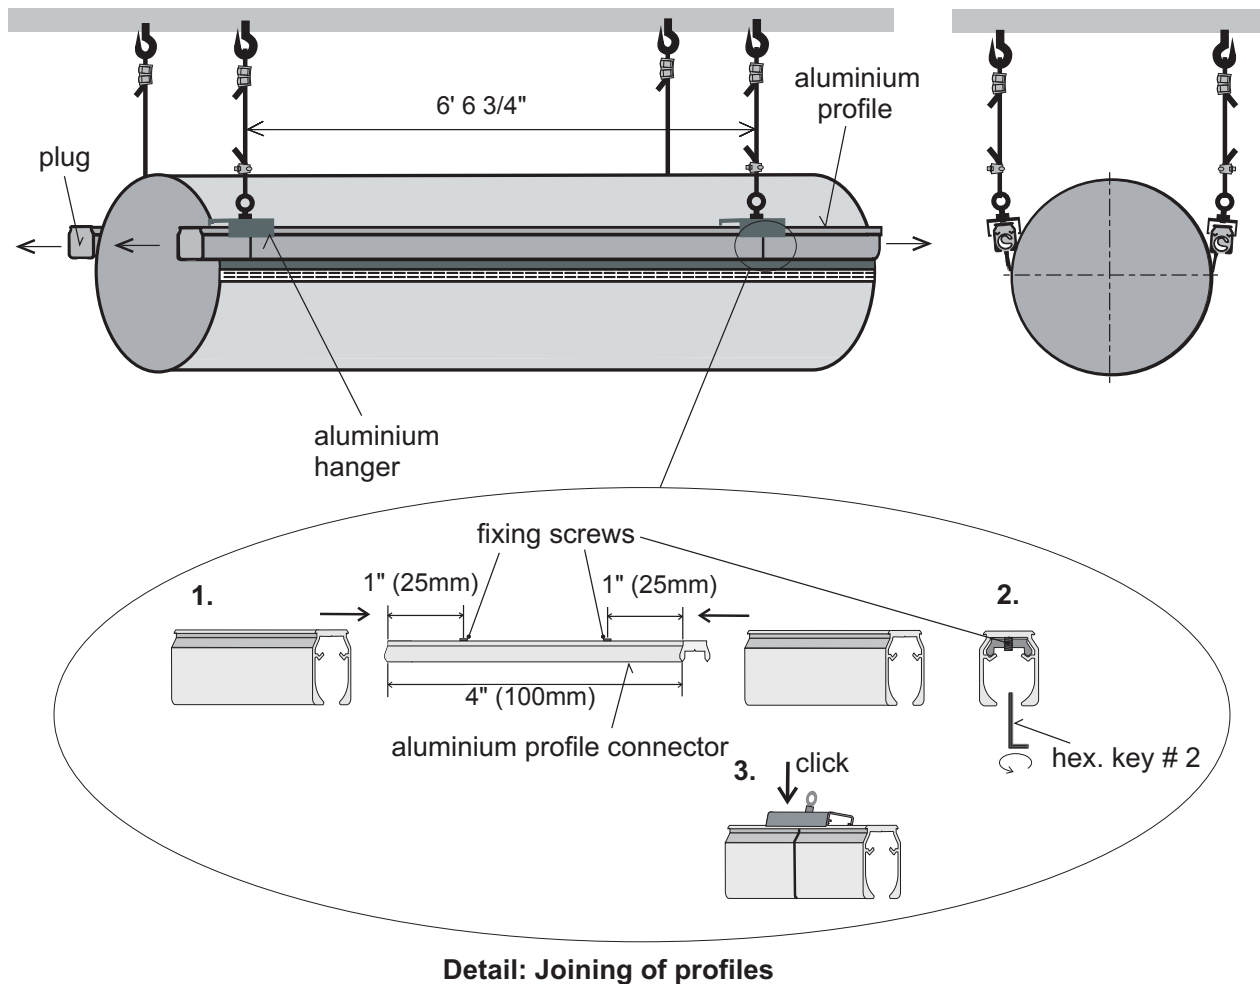

Detail: Joining of profiles

